SIEMENS

7808



Actuators

SQN3...
SQN4...

Electromotoric actuators for use with air dampers and control valves of oil or gas burners of small to medium capacity.

The SQN3... / SQN4... and this Data Sheet are intended for use by OEMs which integrate the actuators in their products!

Use / features

The SQN3... / SQN4... actuators are designed for driving gas or air dampers of oil or gas burners of small to medium capacity, or for load-dependent control of the fuel or combustion air volume:

- In connection with P-PI or PID controllers, such as the RWF40...
- Directly via the different types of burner controls, such as LOA..., LMO..., LMG... or LFL...
- In connection with 1- or 2-wire control or 3-position controllers

- All types of actuators with:
  - Impact-proof and heat-resistant plastic housing
  - Screw terminals for the electrical connections
  - Maintenance-free gear train, which can be disengaged
  - Internal and external position indication
  - Easy-to-adjust end and auxiliary switches for setting the switching points
- Holding torque:
  - SQN3... 0.8...3 Nm
  - SQN4... 6 Nm
- Running time:
  - SQN3... 4.5...30 s
  - SQN4... 120 s
- Direction of rotation:
  - SQN30... counterclockwise
  - SQN31... / SQN41... clockwise

Warning notes



To avoid injury to persons, damage to property or the environment, the following warning notes should be observed!

Do not interfere with or modify the actuators!

- All activities (mounting, installation and service work, etc.) must be performed by qualified staff
- Before making any wiring changes in the connection area of the actuators, completely isolate the equipment from the mains supply (all-polar disconnection)
- Ensure protection against electric shock hazard by providing adequate protection for the connection terminals and by securing the housing cover
- Check to ensure that wiring is in an orderly state
- Fall or shock can adversely affect the safety functions. Such actuators must not be put into operation, even if they do not exhibit any damage

Mounting notes

- Ensure that the relevant national safety regulations are complied with

Commissioning notes

- Prior to commissioning, check to ensure that wiring is in an orderly state

Standards and certificates

CE conformity according to the directives of the European Union

- Electromagnetic compatibility EMC	89 / 336 EEC
- Low-voltage directive	73 / 23 EEC

ISO 9001: 2000
Cert. 00739

ISO 14001: 1996
Cert. 38233

Service notes

- Each time an actuator has been replaced, check to ensure that wiring is in an orderly state


Disposal notes



The actuator contains electrical and electronic components and must not be disposed of together with domestic waste.
Local and currently valid legislation must be observed.

Mechanical design

Housing	- Made of impact-proof and heat-resistant plastic - The housing accommodates: – The reversible synchronous motor with gear train, which can be **disengaged** – The camshaft of the control section – The relays (depending on the type of actuator) – The switches, connected to the terminals via the printed circuit board Color: Gear train housing light-grey, cover dark-grey
Drive motor	- Reversible and locking-proof synchronous motor
Coupling	- Automatic reengagement - Pin «K» Manual disengagement of gear train from motor by pressing pin «K1».

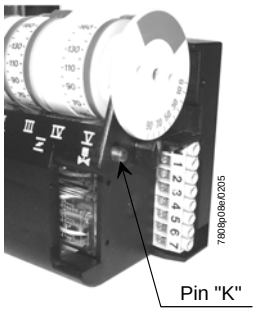

Adjustment of switching points	- With adjustable cams - Scales beside the cams indicate the angle of the switching point - Cams manually adjustable with tool supplied with the actuator
Position indication	- Internally: Scale on the gear train side of the camshaft - Externally: Scale in viewing window (refer to «Dimensions»)
Electrical connections	- Refer to «Technical data»
Gear train	- Maintenance-free
Drive shaft	- Made of black-finished steel. - Ready fitted to the front of the gear train - Different versions available
Mounting and fixing	- Front of the gear train is used as the mounting surface - Actuator is secured via through-holes

Special versions for fitting potentiometer

Fitting a potentiometer	Certain types of actuators are supplied ready prepared for fitting a potentiometer. These actuators differ from the basic type **only in that the housing is higher** and that they are prepared for accommodating a potentiometer. Accessories are not required. The required type of potentiometer is to be ordered as a separate item (refer to «Ordering»). In that case, the third digit after the dot in the actuator's type reference will change from «1» to «2». Example: SQN31.11**1**A2700 → basic type SQN31.11**2**A2700 → version for fitting a potentiometer
Conversion by the user	Users have the choice of converting a basic type of actuator to a version for fitting a potentiometer. For that, a conversion kit type **AGA32** is available (refer to «Ordering»). **Conversion of the basic type reference must be noted by the user on the actuator's type field using a permanent felt-tip pen.**

Type summary (others types of actuators are available on request)

Actuators SQN30... / counterclockwise rotation [8])

Diagram	Drive shaft [1])	Running time at 50 Hz [2]) for 90°	Operating torque (max.)	Holding torque	HS [7])	Relay	Housing length [1])	Types for mains voltage / mains frequency AC 220 V -15 % AC 240 V +10 % 50...60 Hz [4])	AC 100 V -15 % AC 110 V +10 % 50...60 Hz [3])
no.	no.	for 90°	Nm	Nm	pcs.	pcs.	mm		
0	0	4.5	1	0.8	3	---	125	**SQN30.102A2700** [5])	---
1	0	4.5	1	0.8	2	1	110	**SQN30.111A2700**	**SQN30.111A1700**
1	0	4.5	1.5	0.8	2	1	110	**SQN30.111A3500** [9])	---
2	0	4.5	1	0.8	1	2	110	**SQN30.121A2700**	**SQN30.121A1700**
2	0	4.5	1.5	0.8	1	2	110	**SQN30.121A3500** [9])	---
3	0	4.5	1	0.8	1	2	110	**SQN30.131A2700**	**SQN30.131A1700**
5	0	4.5	1	0.8	1	2	110	**SQN30.151A2700**	**SQN30.151A1700**
5	0	12	1.8	1.8	1	2	110	**SQN30.251A2700**	**SQN30.251A1700**
0	0	30	3	3	3	---	110	**SQN30.401A2700**	---
0	3	30	3	3	3	---	110	**SQN30.401A2730**	---
0	0	30	3	3	3	---	125	**SQN30.402A2700** [5])	**SQN30.402A1700** [5])
0	3	30	3	3	3	---	125	**SQN30.402A2730** [5])	---
3	0	30	3	3	1	2	110	**SQN30.431A2700**	---
5	0	30	3	3	1	2	110	**SQN30.451A2700**	---

Actuators SQN31... / clockwise rotation [8])

Diagram	Drive shaft [1])	Running time at 50 Hz [2]) for 90°	Operating torque (max.)	Holding torque	HS [7])	Relay	Housing length [1])	Types for mains voltage / mains frequency AC 220 V -15 % AC 240 V +10 % 50...60 Hz [4])	AC 100 V -15 % AC 110 V +10 % 50...60 Hz [3])
no.	no.	for 90°	Nm	Nm	pcs.	pcs.	mm		
0	0	4.5	1	0.8	3	---	110	**SQN31.101A2700**	**SQN31.101A1700**
0	0	4.5	1	0.8	3	---	125	**SQN31.102A2700** [5])	**SQN31.102A1700** [5])
1	0	4.5	1	0.8	2	1	110	**SQN31.111A2700**	---
1	6	4.5	1	0.8	2	1	110	**SQN31.111A2760**	---
2	0	4.5	1	0.8	1	2	110	**SQN31.121A2700**	---
2	3	4.5	1	0.8	1	2	110	**SQN31.121A2730**	---
2	6	4.5	1	0.8	1	2	110	**SQN31.121A2760**	---
5	0	4.5	1	0.8	1	2	110	**SQN31.151A2700**	**SQN31.151A1700**
5	3	4.5	1	0.8	1	2	110	**SQN31.151A2730**	---
2	0	12	1.8	1.8	1	2	110	**SQN31.221A2700**	---
2	3	12	1.8	1.8	1	2	110	**SQN31.221A2730**	---
5	0	12	1.8	1.8	1	2	110	**SQN31.251A2700**	**SQN31.251A1700**
5	3	12	1.8	1.8	1	2	110	**SQN31.251A2730**	---
5	0	12	1.8	1.8	1	2	125	**SQN31.252A2700** [5])	**SQN31.252A1700** [5])
5	0	15	2	1.8	1	2	110	**SQN31.351A2700**	---
0	0	30	3	3	3	---	110	**SQN31.401A2700**	**SQN31.401A1700**
0	3	30	3	3	3	---	110	**SQN31.401A2730**	---
0	6	30	3	3	3	---	110	**SQN31.401A2760**	---
0	0	30	3	3	3	---	125	**SQN31.402A2700** [5])	**SQN31.402A1700** [5])
1	0	30	3	3	2	1	110	**SQN31.411A2700**	---
1	3	30	3	3	2	1	110	**SQN31.411A2730**	---
6	0	23	2.5	2.5	---	2	125	**SQN31.762A2700** [5])	---
4	0	120	6	6	2	1	110	**SQN31.941A2700**	---

Actuators SQN41... / clockwise rotation [8])

Diagram	Drive shaft [1])	Running time at 50 Hz [2]) for 90°	Operating torque (max.)	Holding torque	HS [7])	Relay	Housing length [1])	Types for mains voltage / mains frequency AC 220 V -15 % AC 240 V +10 % 50...60 Hz [4])	AC 100 V -15 % AC 110 V +10 % 50...60 Hz [3])
no.	no.	for 90°	Nm	Nm	pcs.	pcs.	mm		
4	0	120	6	6	2	1	110	**SQN41.941A2700**	---

Legend

[1]) Refer to «Dimensions»
[2]) At 60 Hz, running times are about 20 % shorter
[3]) AC 100…110 V +10 % / -15 % possible, but in case of undervoltage torque is reduced by about 20 %
[4]) AC 220…240 V +10 % / -15 % possible, but in case of undervoltage torque is reduced by about 20 %
[5]) Suited for fitting a potentiometer (refer to «Fitting a potentiometer»)
[6]) Under nominal conditions; under extreme conditions (e.g. +60 °C, AC 230 V –15 %) about –25 %
[7]) Optional auxiliary switches (in addition to the 2 end switches)
[8]) When facing the drive shaft and when control voltage is fed to end switch I
[9]) On time at: - AC 220 V -15 % / +10 % and 50 Hz – max. 50 %
- AC 240 V -15 % / +10 % and 50 Hz – max. 35 %

Ordering

Actuator refer to «Type summary»

Potentiometer ASZ.... refer to Data Sheet N7921




Conversion kit AGA32 refer to Data Sheet N7921

- For converting a basic type of actuator to a version for fitting a potentiometer

Example of conversion by the user:

SQN30.401A2730	- Actuator (refer to «Type summary»)
AGA32	- Conversion kit
ASZ8.703	- Coiled potentiometer 220 Ω / 90°, 3-pole

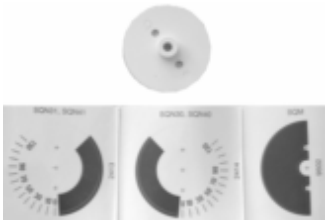

Service kit AGA33 refer to Data Sheet N7921

- For replacing old potentiometers type ASZ...5... / ASZ...6... by new potentiometers type ASZ...7... and ASZ...8...

Technical data

General actuator data

Actuator	Mains voltage	AC 220…240 V –15 % +10 % AC 100…110 V –15 % +10 %
	Mains frequency	50...60 Hz ±6 %
	Type of motor	synchronous motor
	Power consumption	6.5 VA
	Angular position	max. 160°
	Mounting position	optional
	Degree of protection	IP 40 to DIN 40050, provided adequate cable entries and fixing screws are used
	Safety class	I to VDE 0631
	Cable entry	threaded cable gland holder for 1 x Pg9 and 1 x Pg11, no locknut required cable strain relief to be provided by the user (also refer to «Degree of protection»), Pg glands for all types are included in the delivery
	Cable connections	screw terminals for wires having a cross-sectional area of 0.5 to 2.5 mm²
	Ferrules	matching the dia. of the stranded wire
	Direction of rotation	refer to «Type summary»
	Torques and holding torques	refer to «Type summary»
	Running times	refer to «Type summary»
	Weight (on average)	approx. 800 g
End and auxiliary switches	Number of end switches	2
	Number of auxiliary switches	refer to «Type summary»
	Actuation	via camshaft, color-coded cams (refer to «Connection diagrams»
	Switching voltage	AC 24...250 V
	Adjustment of cams in increments of	1°
	Max. terminal rating at cos φ = 0.9	**under load ON, with no load OFF** - starting current 14 A - operating current 2 A **under load ON...OFF** - starting current 7 A - operating current 1 A

Environmental conditions

Storage	DIN EN 60 721-3-1
Climatic conditions	class 1K2
Mechanical conditions	class 1M2
Temperature range	-20...+60 °C
Humidity	< 95 % r.h.
Transport	DIN EN 60 721-3-2
Climatic conditions	class 2K2
Mechanical conditions	class 2M2
Temperature range	-20...+60 °C
Humidity	< 95 % r.h.
Operation	DIN EN 60 721-3-3
Climatic conditions	class 3K3
Mechanical conditions	class 3M3
Temperature range	-20...+60 °C
Humidity	< 95 % r.h.

⚠ **Condensation, formation of ice and ingress of water are not permitted!**

Function


The synchronous motor drives the actuator's shaft via the gear train. The attached camshaft actuates the end and auxiliary switches. The switching position of each end and auxiliary switch can be adjusted within its working range via the associated cam. Some of the actuator versions are equipped with electronic modules for auxiliary functions in connection with the end and auxiliary switches or with external devices, such as controllers (refer to «Connection diagrams»). The functions and technical data of both lines of actuators SQN3... and SQN4... are nearly identical.

Connection diagrams

The following connection diagrams show the actuator's start position as supplied:
- End switch position II (CLOSED)
- Dead

No. ⓪ → LFL... / LGK16... / LAL... and LOK16...


2-stage or modulating operation → Prepurging at nominal load position «NL»

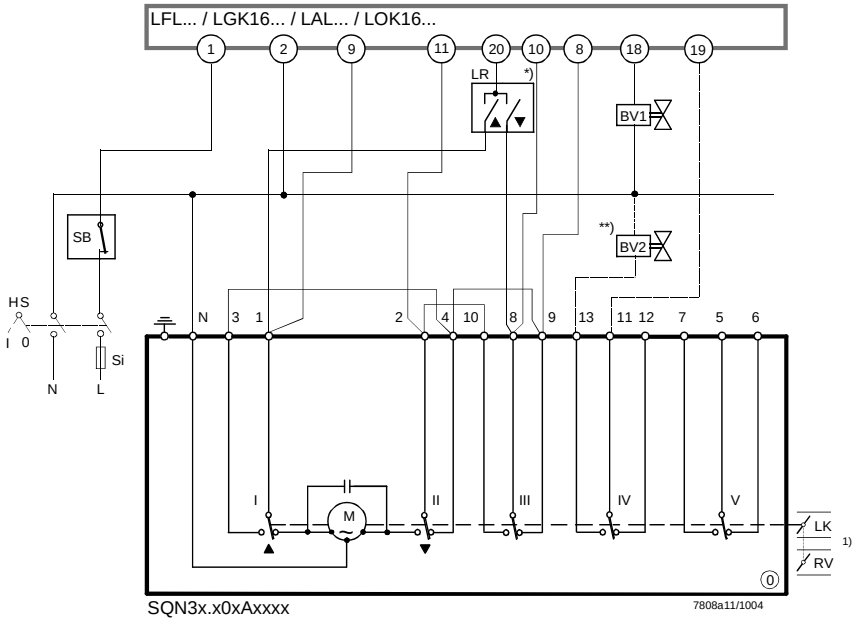

1) Diagram shows arrangement for modulating operation

*) Thermostat or similar with changeover contact (2-wire control) or 3-position controller for «on / off» positioning pulses and neutral position


**) In case of modulating operation, fuel valve «BV2» is replaced by a gas control valve «RV»

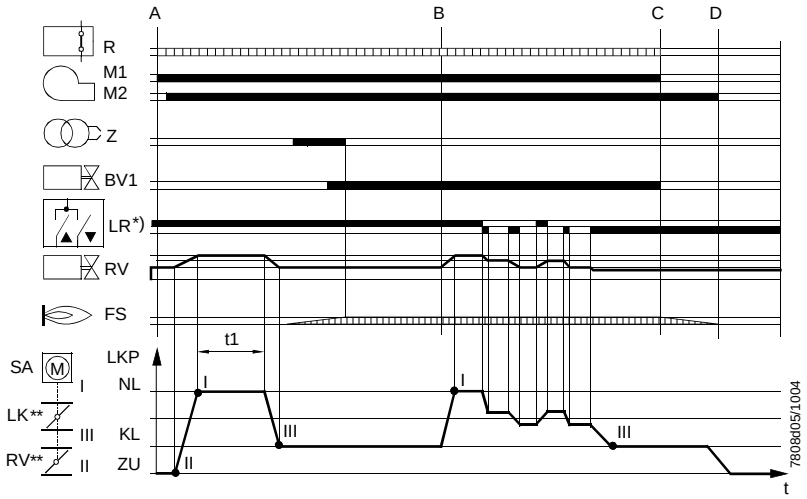

Program sequence diagram shows modulating operation


No. ① → LFL... / LGK16... / LAL... / LOK16...

2-stage operation → Prepurging at nominal load position «NL»

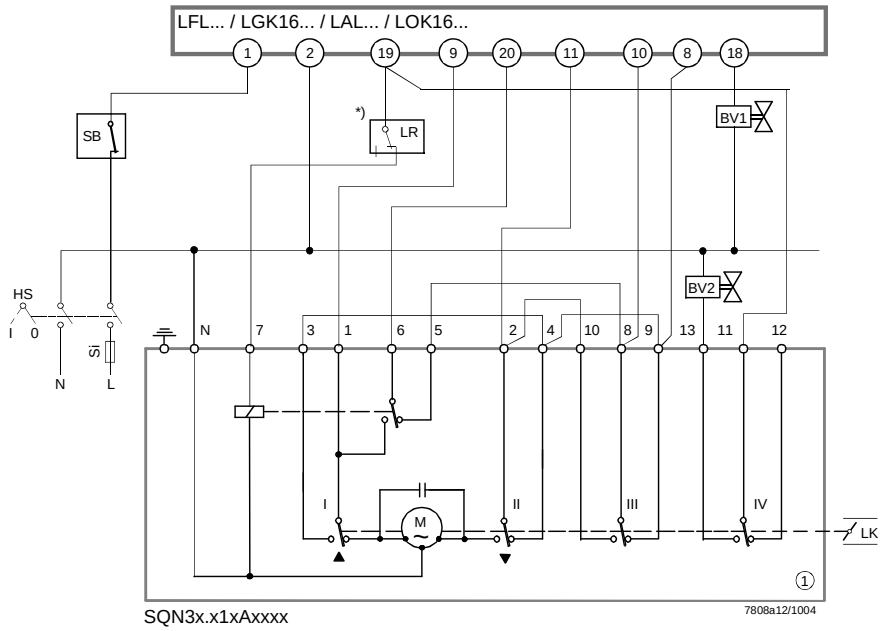


SQN3x.x1xAxxxx

*) Thermostat or similar with NO contact (1-wire control)

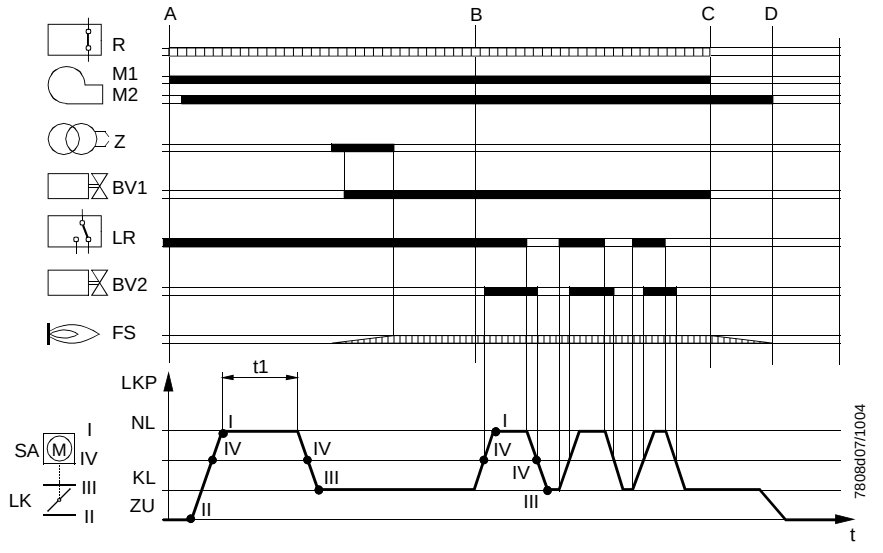

No. ② → LOA24... / LOA25... / LOA28... / LMO24... / LMO44...


2-stage operation → Prepurging at low-fire position «KL»

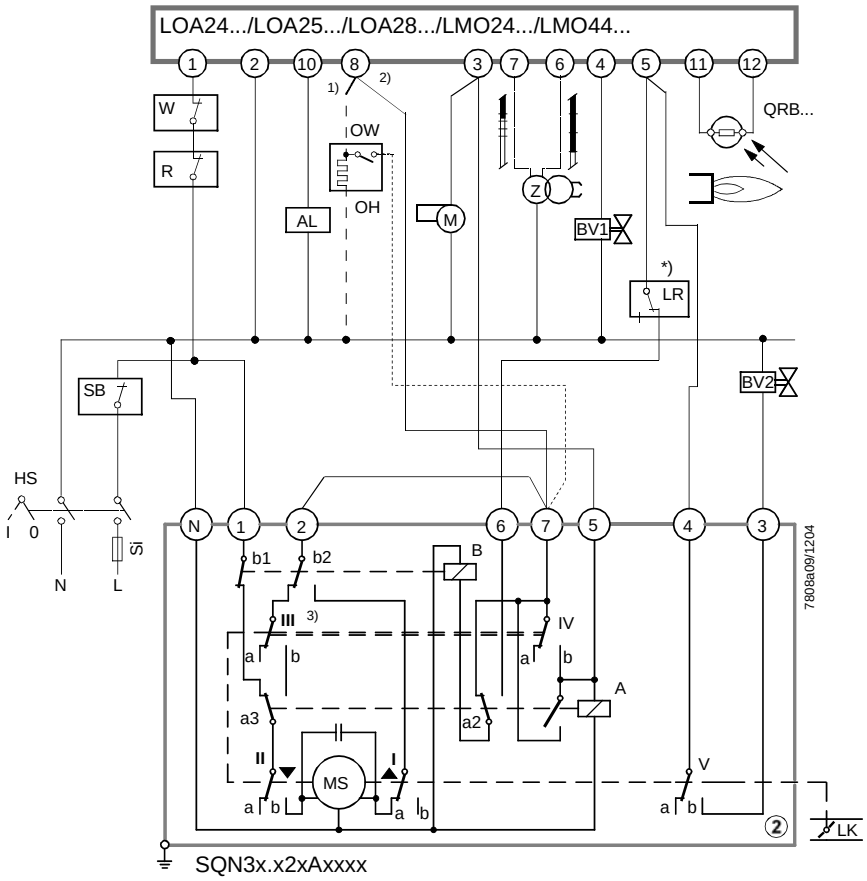

1) With oil preheater
2) Without oil preheater


*) Thermostat or similar with NO contact (1-wire control)

3) Cams III and IV are rigidly connected

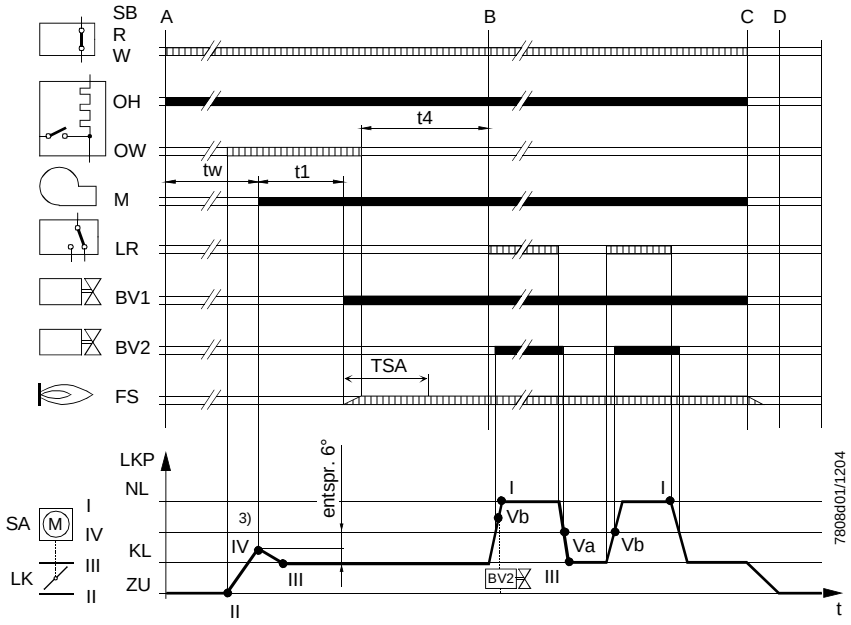


No. ② → LMG21... / LMG25... / LGB21...

2-stage operation → Prepurging at low-fire position «KL»

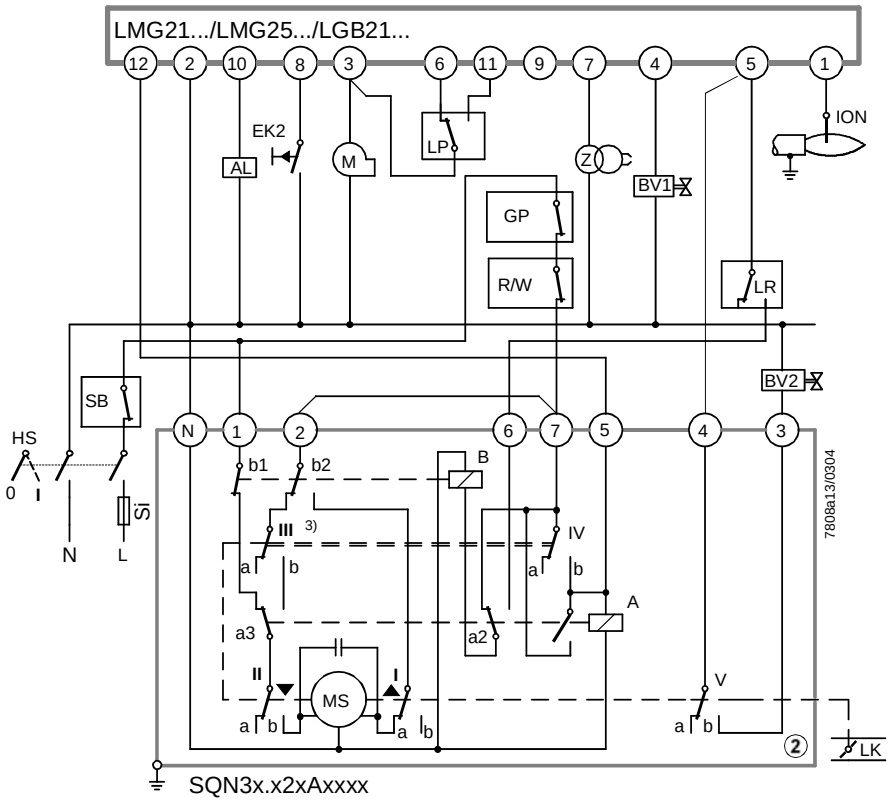


3) Cams III and IV are rigidly connected

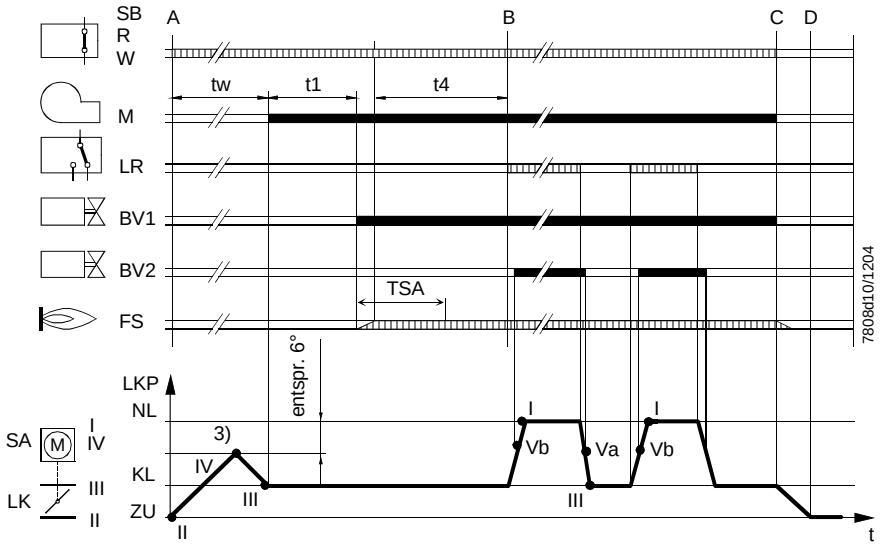

No. ⑤ → LMG22... / LGB22... / LGB32...

2-stage or modulating operation → Prepurging at nominal load position «NL»

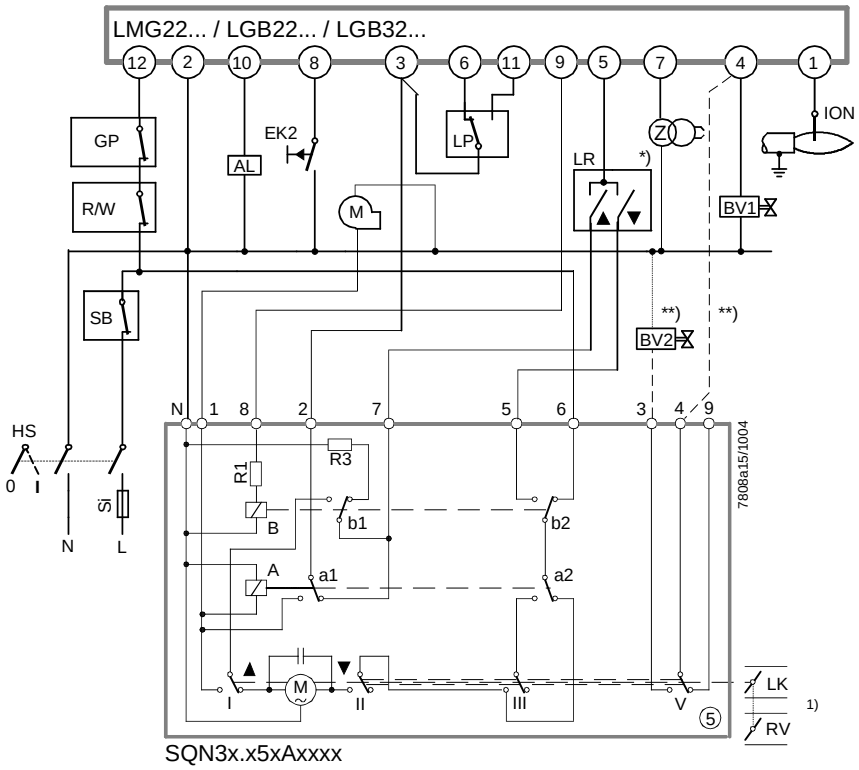


SQN3x.x5xAxxxx

1) Diagram shows arrangement for modulating operation

*) Thermostat or similar with changeover contact (2-wire control) or 3-position controller for «on / off» positioning pulses and neutral position


**) In case of 2-stage modulating burners (with gas damper «RV»), «BV2» and the connection between the terminals (shown as a broken line) will not be needed

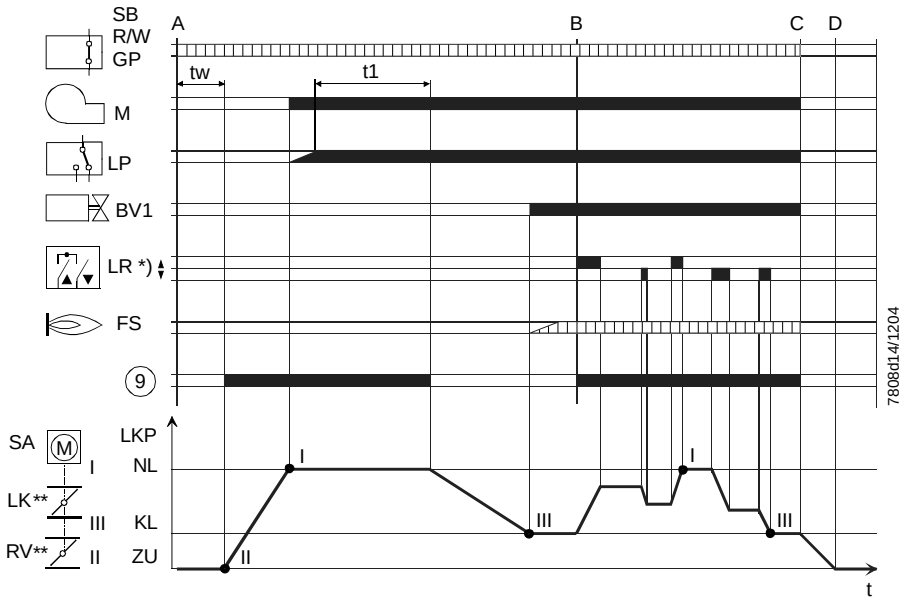

Program sequence diagram shows modulating operation

No. ⑥ → LMG22... / LGB22... / LGB32...


Modulating operation → Prepurging at nominal load position «NL»

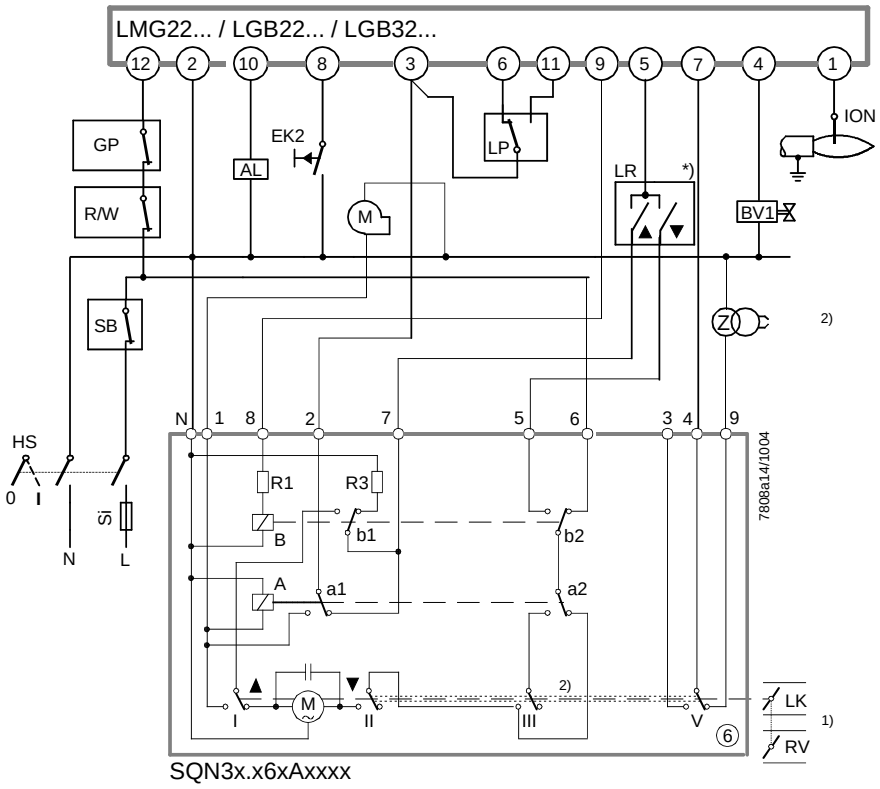

1) Diagram shows arrangement for modulating operation

2) The cams of switches III and V are rigidly connected. This ensures that ignition takes place at the low-fire position «KL»

*) Thermostat or similar with changeover contact (2-wire control) or 3-position controller for «on / off» positioning pulses and neutral position

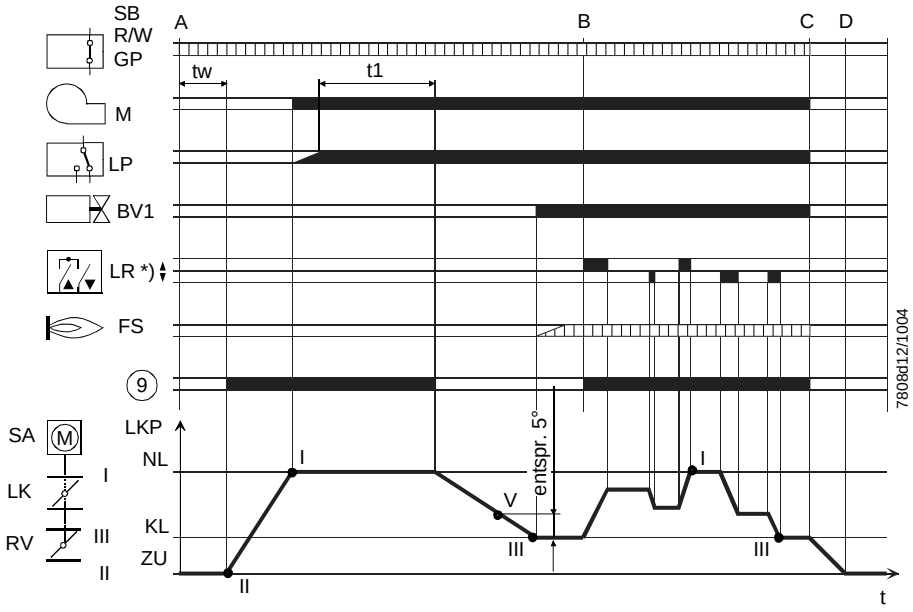


Program sequence diagram shows modulating operation

⚠ **If the contacts of switch V welded in position 4 → 9, supervision of the ignition load position would be negated and not be detected in operation. This means that the circuit is not safety-related but only used for supervision purposes. The user must ensure that in the event of failure (should the burner ignite at nominal load «NL»), no damage will occur.**

Connection diagram (cont'd)


No. ④ → Special application

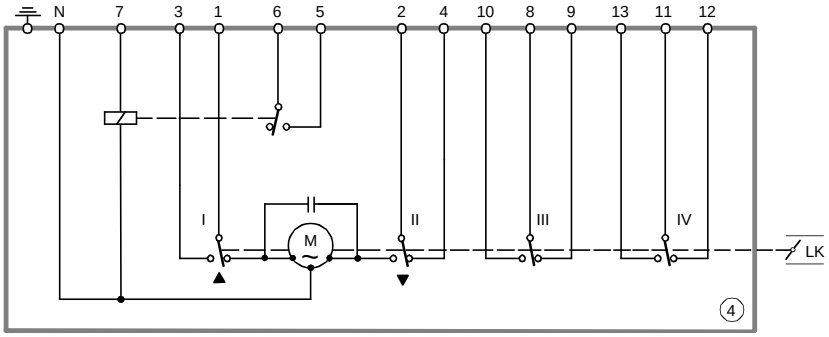


SQN4x.x4xAxxxx

No. ③ → TMG740 / TMO720 (burner control of other manufacture)

2-stage operation → Prepurging at nominal load position «NL»

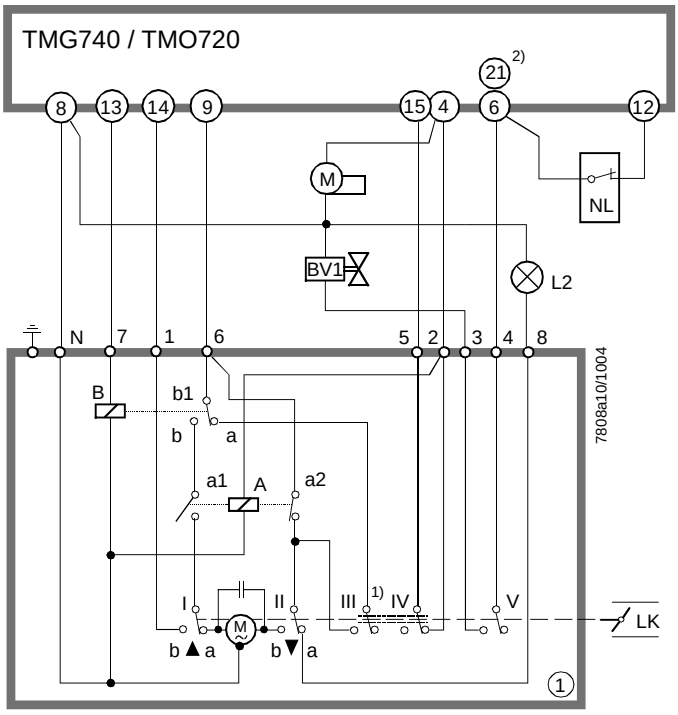

SQN3x.x3xAxxxx

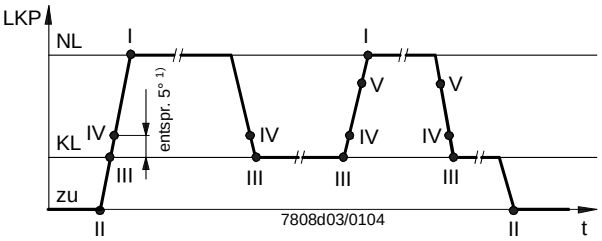

1) Cams of switches III and IV are rigidly connected
2) TMO720 terminal no. 6
TMG740 terminal no. 21

- **TMG... and TMO... are devices of other manufacture, neither made nor supplied by Siemens. Combination with the type of Siemens actuator proposed here must be checked with the supplier of the TMG... or TMO... while taking into consideration safety aspects and the current burner control version. The user assumes full responsibility for this application.**

Legend


No. ②	Number of internal diagram (second position after the dot in the actuator's type reference)
I / II	End switch
III / IV / V	Auxiliary switch
AL	Remote indication of fault (alarm)
BV1	Fuel valve stage 1
BV2	Fuel valve stage 2
EK2	External remote reset button
ION	Ionization probe
FS	Flame signal amplifier
GL	Gas / air ratio controller
GP	Gas pressure switch
HS	Main switch
KL	Low-fire
L	Live conductor
LK	Air damper
LKP	Air damper position
LP	Air pressure switch
LR	Load controller
M	Burner or fan motor
Ⓜ	Actuator's synchronous motor
M1	Without postpurging
M2	With postpurging
N	Neutral conductor
NL	Nominal load
OH	Oil preheater
OW	Oil preheater's readiness contact
QRB...	Photoresistive flame detector
R	Temperature or pressure controller
⏚	Relay
RV	Gas damper
SA	Actuator
Si	External primary fuse (as specified in the Data Sheet of the relevant burner control)
SB	Safety limiter
ST...	Stage
t... / T...	Program times (refer to the Data Sheet of the relevant burner control)
TSA	Safety time
R	Resistance
Z	Ignition transformer
ZU	Damper fully closed
▲	Direction of rotation OPEN
▼	Direction of rotation CLOSE

Program sequence diagrams

A	Burner ON
A – B	Startup of burner
B – C	Burner operation / load control operation (modulating or 2-stage)
C	Burner OFF
C – D	Overrun time
D	End of program sequence, burner control ready for a new start

Dimensions

Dimensions in mm

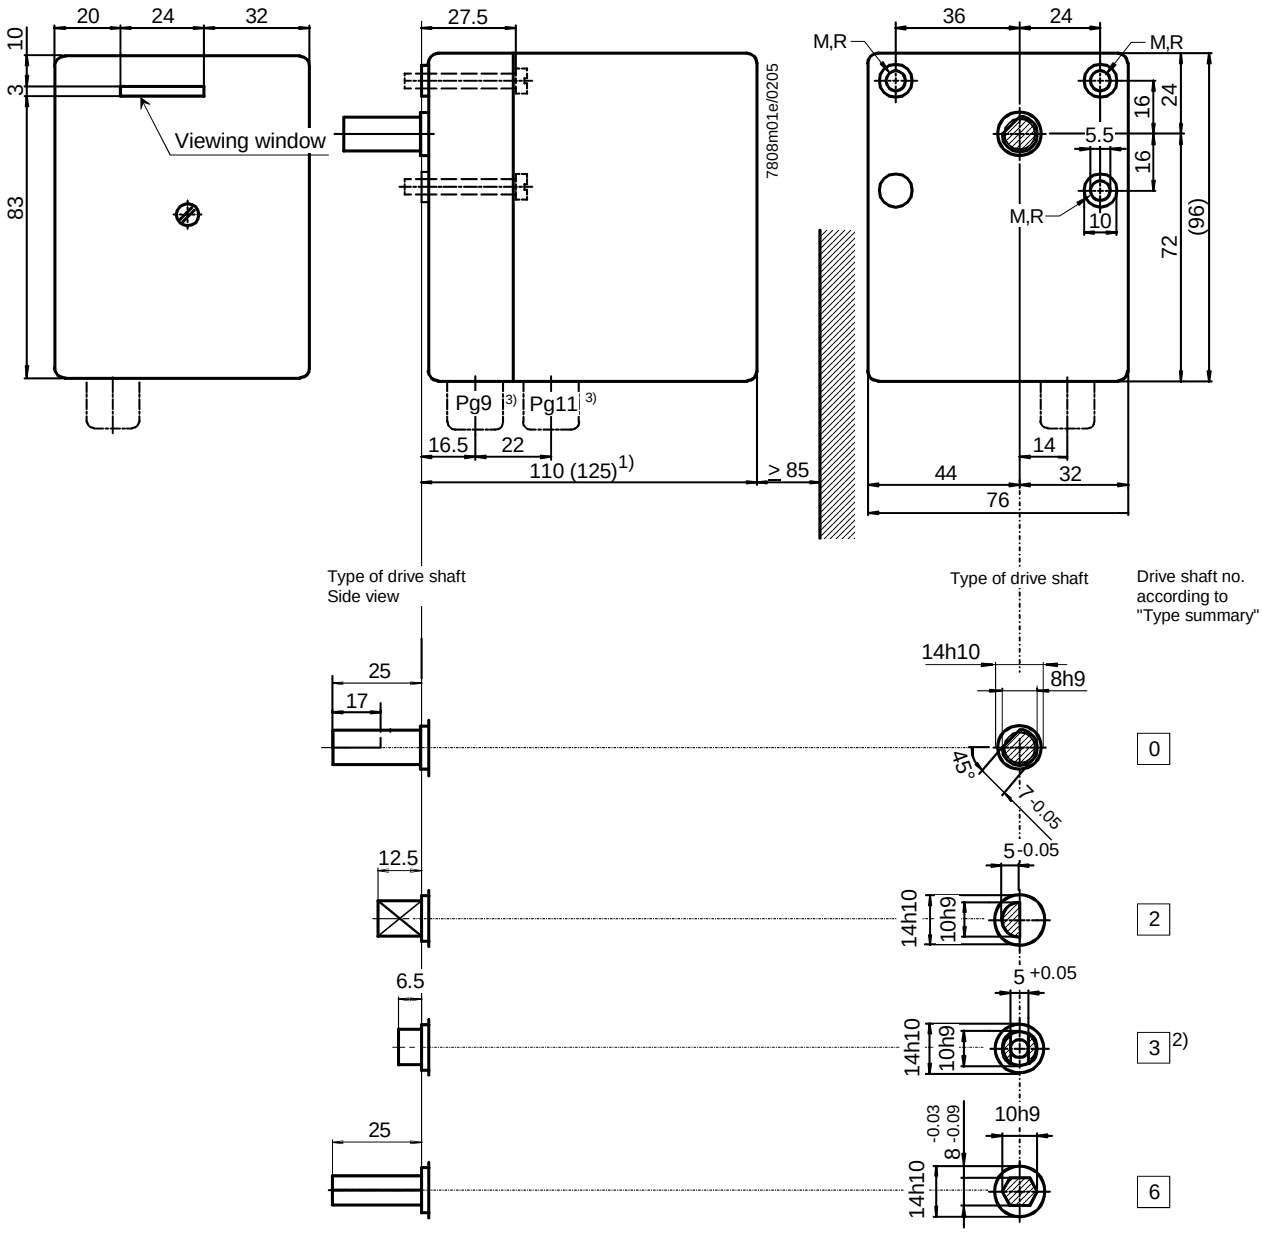

All drive shafts are shown in end switch position II (CLOSED, as supplied).

1) Housing length depending on type of actuator (refer to «Type summary»)
2) Center slot: 6.3 mm deep
Hole dia. 5.1 mm: 16.5 mm deep (incl. center slot depth)
3) Not included in delivery

R Fixing positions
M Through-hole 5.3 mm dia.

©2005 Siemens Building Technologies Production GmbH
Subject to change!